



USER MANUAL



Precautions for use and safety



Please read this manual before using the device

the technical characteristics of the power supply network.

SAFETY PRECAUTIONS

The symbols in this manual are used to emphasize warnings to be followed in order to avoid accidents.

The meaning of the symbols is as follows:



Something that can cause damage or damage the device.

OTHER SYMBOLS



Required actions



Prohibited actions

OPERATION WITH EXTERNAL AC/DC POWER SUPPLY UNIT.



Connect the device to the mains power supply and use it only with the external power supply unit supplied by the manufacturer with the device. In case of damage, contact the technical service department and replace only with power unit identical to the one supplied with the B.Beat



Do not use exceeding the range of the system and other electrical equipment. Before connecting the external power supply unit to the power supply network, check the power supply unit's compliance to

OPERATION WITH POWER BANK

Use power banks with these characteristics: PowerBank 10000mAh/24° complies with the technical safety requirements of EN 62368-1.

ALTERATION



Do not open the unit or try to alter the product.

MANAGEMENT



Do not drop, tip over the unit or exert excessive force.



Be careful not to allow any foreign object or liquids into the unit.



The device may be used by children not less than 8 years of age and by persons with reduced physical, sensory or mental capacities, or lacking the necessary experience or knowledge, provided that they are supervised or after they have received instructions regarding the safe use of the device and understanding of the inherent hazards.

Precautions for use and safety



- ⊘ Children should not play with the device.

Cleaning and maintenance intended to be carried out by the user must not be carried out by children without supervision.

- ⊘ Do not use near or in explosion-prone environments.

- ⊘ Do not use in excessively humid places, or in rain or water jets. Do not immerse the device in liquid materials.



The device should be placed on stable and solid surfaces, at a minimum distance of 15 cm from the edge of the surface in order to prevent accidental falls.

- ⊘ The device should not be used if enclosed inside boxes or containers of any kind.

The support feet must not be detached from the bottom of the device. Do not use the device on non-rigid, flat surfaces.

If you want to use the device in conjunction with stands or other supports, it is suggested that you use the B.Beat Plier Stand, which allows you to join B.Beat to microphone stands and other stage stands.



Leave the ventilation grille of the device located at the bottom clear.

ENVIRONMENT

Do not use the unit in extreme temperatures (high or low).

- ⊘ Do not use near heat sources, such as radiators and stoves.

- ⊘ Do not use in excessively humid places or in water.

- ⊘ Do not use in places with excessive vibration.

- ⊘ Do not use in places with excessive dust or sand.

EXTERNAL AC/DC POWER SUPPLY UNIT MANAGEMENT

- ⓘ When disconnecting the AC adapter from the system, always grasp the body of the adapter itself.

In case of a thunderstorm, or if the unit is not used for a long period, unplug it from the AC outlet.

- ⓘ Connect the power unit only to power grid outlets that are easily accessible by the user.



Precautions for use and safety

CONNECT CABLES AND INPUT/OUTPUT JACKS

- ❗ Always turn off all equipment, before connecting cables.
- ❗ Always unplug all connection cables and the AC adapter before moving the unit.
- ⊘ Connect the device only to instruments that comply with the safety requirements of the applicable harmonized technical product standards. Connect the connecting cables to the auxiliary accessories in such a way that they do not present the danger of pulling downward due to possible unintentional bumping, in order to eliminate the risk of the device falling down.

PRECAUTIONS FOR USE. INTERFERENCE WITH OTHER ELECTRICAL EQUIPMENT

B.BEAT equipment complies with the essential requirements of Annex I of Directive 2014/35/EU (Electromagnetic Compatibility Directive). In particular, the equipment is designed and manufactured on the basis of technological progress, so that:

a) the electromagnetic disturbance produced does not exceed the level above which radio and telecommunications equipment or other equipment cannot operate normally;

b) exhibit a level of immunity to foreseeable electromagnetic disturbances based on the use for which they are intended that allows their normal operation without unacceptable deterioration.

However, equipment susceptible to interference or emitting powerful electromagnetic waves could cause interference if placed nearby. In such a case, place the other device away from each other. With any kind of digitally controlled electronic equipment, including, electromagnetic interference can cause malfunction, damage and destroy data, and create troubles. Be careful

CLEANING

Use a soft, dry cloth to clean the unit. If necessary, slightly moisten the cloth. Do not use abrasive cleaners, waxes or solvents, including alcohol, benzene and paint solvents.

MALFUNCTIONS

If the unit breaks down or fails to work, unplug the AC adapter immediately, turn off the unit and disconnect the other cables. Contact the distributor from whom you purchased the unit or a B.BEAT service center with the following information: product model, serial number and detailed symptoms of error or malfunction, along with your name, address and telephone number.

Precautions for use and safety



COPYRIGHT

Windows, Windows Vista, Windows XP and Windows 7 are trademarks or registered trademarks of Microsoft Corporation. Macintosh and Mac OS are trademarks or registered trademarks of Apple Inc. The SD and SDHC logos are registered trademarks. All other product names, trademarks, and company names mentioned in this document remain the property of their respective owners.

DISPOSAL

INFORMATION TO USERS pursuant to Legislative Decree No. 49 of March 14, 2014, "Implementation of Directive 2012/19/EU on waste electrical and electronic equipment (WEEE)."

The WEEE symbol on the equipment or its packaging indicates that the product, at the end of its useful life, must be collected separately from other waste.

Separate collection of this equipment that has reached the end of its life is organized and managed by the manufacturer. The user who wishes to dispose of this equipment should then contact the manufacturer and follow the system the manufacturer has adopted to allow separate collection of the equipment that has reached the end of its life.





B.Beat Data Sheet

Internal Audio File Format	PCM (uncompressed) 48 kHz 24 bit
Compatible Audio Formats when importing (will be converted into internal format)	WAV 44.1 kHz, 48 kHz, 96 kHz 16/14 bit MP3 fixed bit rate [64 - 320] kbps MP3 VBR OGG fixed bit rate [64 - 320] kbps AAC STEMS MTA M-Live
Internal Video Format	H-264 HD / Full HD (1280 x 720 / 1920 x 1080)
Compatible Video Formats when importing	MP4, MOV
Compatible Image Formats	JPG, PNG
Digital processing Internal audio	8-channel D/A 24 Bit Sigma/Delta 48 kHz. Typical S/N Ratio = 112 dB
Display	24" OLED, 128x64, Monochrome
Gain output	+3.0 dB
Jack Audio output	6 Jack Audio output 6.5 mm mono, balanced
Headphone Jack Output	1 Jack Stereo Output 6.5mm
Jack Audio Input	2 Mono Line Inputs L/R, Only-Left/Stereo
Internal memory	32 - 64 - 128 Gb (depending on version)
Network interface	RJ45 10/100/1000 Mbps Ethernet socket
MIDI port	Mini Jack 3.5 mm Cable Type-B
Pedal	Switch Pedal N/O o N/C
Power supply	USB-C 5.1VDC, 3A, 1700mA consumption. Autonomy with 10000mAh/24A PowerBank battery about 6 hours.
Video	HDMI Type A output. Maximum resolution 1920x1080
USB port	USB 2.0 Type A per Memory Stick, WiFi USB interface
External power unit	AC/DC Adapter Mod. TAP15-050S300E1 INPUT 100-240VAC Freq 50-60Hz OUTPUT 5.1VDC - 3A



We introduce you



Thank you for choosing B.BEAT, an innovative and unique product. B.BEAT is the ideal tool to enrich and simplify Live performances of Bands using Stereo or Multitrack Sequences, even with synchronized Video and Images Here we want to summarize the main features of the device:

READING MUSIC FILES AND VIDEOS

B.BEAT plays Music files in WAV 24 Bit per sample format (if the file is 16 or 32 Bit it is converted to 24 Bit), Audio Multitrack, Stems, Midi, Video Mp4 and JPG. B.BEAT reads various digital formats¹, from simple Mp3 files to full-fledged multitrack audio projects from Daw, up to 16 Mono or 8 Stereo tracks. B.BEAT can store a high number of Backing Tracks, and the available space depends on the versions of Internal Memory available:

For example, in the 128 GB version with Backing Tracks on 4 mono tracks: about 60 hours of music can be stored. The calculation is approximate and depends on several factors that cannot be standardized.

❗ We suggest completing the editing of the Backing Tracks through the DAWs you use for recording before importing the project to B.BEAT. Any changes related to timbres and effects will not be possible once the project is uploaded to B.BEAT.

Backing Tracks can be synchronized to a Video or Images that will be transmitted to Video Wall from HDMI output. Synchronization operations must be carried out with dedicated Apps before uploading Au-

dio - Video projects to B.Beat.

INTEGRATED DIGITAL MIXER

B.BEAT Includes a digital mixer to handle 6 separate outputs, two inputs, a Headphone output for Click, return from Mixer and Backing tracks; with 4 convenient potentiometers the musician can balance in real time what he/she wants to hear in headphones during the performance. With the 6 outputs, the tracks that make up the Backing Tracks can be sent to the stage mixer. A Stereo audio signal can return to B.Beat from any source through the two inputs, and B.Beat also recognizes the Click track and can direct it to any of the 6 available outputs and to the headphone output at the same time.

B.BEAT ON STAGE

B.Beat is designed and engineered to have maximum reliability during LIVE performances. There is a special button on the [LIVE] panel that can be used the moment the Show starts because from that moment on, the B.Beat processor will be busy ensuring maximum performance without wasting resources.

B.Beat handles individual Backing Tracks that can be organized into convenient Playlists, or actual Shows consisting of multiple scenes. Projects can contain Music, Video and Images but also MIDI tracks to send messages to the various devices you use for Live performances. The philosophy behind B.Beat is to simplify the management of Backing tracks and Vid-

We introduce you

eos during a Show. With B.Beat there is no need to bring to the stage Computers, Tablets, Sound and Video Cards, Cables, Mixers - more or less small - and other accessory devices: B.Beat solves the issue in a few square Cm. and 600 gm. of weight.

PREPARING B.BEAT FOR THE SHOW

Backing tracks and videos that make up the show you want to run with B.Beat must be made with your DAW and dedicated Apps. Once you have finished the studio work by also completing the synchronization with the videos that accompany the music you are ready to transfer the music material to B.Beat. The video may also be unsynchronized.

Connect B.Beat to your Computer (Windows or Mac OS) via network cable and launch the B.Beat Manager App: from now on you can import all the material needed for the show to B.Beat. On B.Beat Manager you can compose playlists, or you can assemble a real show consisting of several scenes. You can also join the audio tracks with a Midi track that can be used to launch Midi controls to the Devices you use on stage.

If you have Mp3 backing tracks that you want to simply upload to B.Beat without going through the PC, you can use the USB flash drive and very quickly transfer the files to the internal memory, or you can play them directly from the flash drive. If they were Backing Tracks lacking Click you can add it directly from B.Beat or from B.Beat Manager via a special feature based on Artificial Intelligence algorithms²

FUTURE DEVELOPMENTS

The B.Beat Manager App is being continuously updated, and many innovative functions will be implemented over time. B.Beat will have a strong development regarding connections to Smart Devices on stage. We are working on a number of applications that will make it possible to concentrate on B.Beat a number of operations needed for musical performances and beyond. B.Beat will become the overall control center that will avoid the use of Computers on stage.

SONG SERVICE WEBSITE

B.Beat can read MTA (multitrack Audio) format files produced and distributed by M-Live through Song Service website. The music repertoire is vast, and new Backing Tracks from the international pop repertoire are produced every week. MTA Files are multitrack files that B.Beat reads at 8 stereo tracks. The Backing Tracks are organized as follows: Track 1 Drums, Track 2 Bass Guitar, Track 3 Guitar, Track 4 Keyboards, Track 5 Orchestra, Track 6 Wind instruments, Track 7 Click, Track 8 Melody. Audio projects with 16 separate stereo tracks are also available, which can be freely adapted to B.Beat with any DAW. Website address:

www.songservice.it
www.song-service.com
www.song-service.de

Good music, with B.Beat!

² Available in the next version of Firmware.



INDEX

2	SAFETY
6	TECHNICAL DATA SHEET.
8	LET'S INTRODUCE B.BEAT
12	LET'S TAKE A LOOK AT B.BEAT
15	COME ON, LET'S GET STARTED. - MAIN FEATURES AND CONNECTIONS
16	TRANSFER THE DATA
18	BACKING TRACKS - FORMATS
21	OPERATING ENVIRONMENTS
25	PLAYLIST
28	SHOWS
30	METRONOME
31	SYSTEM
34	LYRICS AND CHORD WRITING
36	DISPLAY ICONS

WHAT YOU FIND IN THE BOX



you will become inseparable!



ACCESSORIES THAT ARE NOT PART
OF THE DEVICE AND SUPPLIED WITH IT.

POWER SUPPLY



NETWORK CABLE



USER MANUAL,
you are reading.



OPTIONAL ACCESSORIES

M-Pen for Wi Fi connection and Hotspot generation




B.Beat Hard Bag, custom-made hard bag



B.Beat plier, pole stand



Let's take a look at

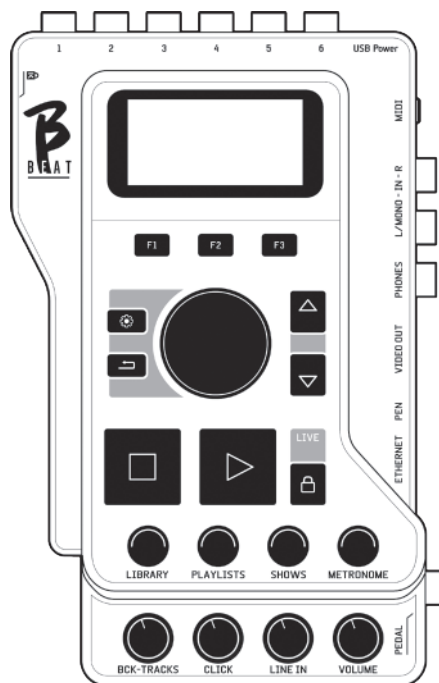

Front panel

Function keys: F1 - F2 - F3 time by time are assigned to different functions, depending on the screens. Function descriptions are in the lower boxes of the display.

UP – DOWN: generically serve to scroll through lists on the display, to change the position of the active cursor, or to increase/decrease a selected value.

SYSTEM key: to access the System menu

BACK key: go back one Alpha Dial level - Enter: The Alpha dial is used to remove a list on Display, to change a value (e.g., the volume of a track). Pressed in the center provides ENTER consent.

STOP: pressed once stops the playback of the current Song/Video in the pause position. Pressed the second time sends the current song/video to the top. Pressed the third time empties the Ram memory of B.Beat. B.Beat can load Audio Backing Tracks synchronized to video, or audio and video unsynchronized and independent. In this case, the Play and Stop buttons will relate to music and pictures independently. You can select Video or Audio with the F2 key from the Player screen.

PLAY: the Play key starts the Audio Backing Tracks (if we are positioned on AUDIO or the Video if we are positioned on Video). When the player is paused, press Play again to restart it.



LIVE: sets B.Beat in live operation, to avoid blockages and incidental actions, such as unintentional pressing of a key. To turn it on: press Live and confirm your choice with F3, to turn it off press LIVE again and F3 to confirm. If we are in Live mode upon pressing any key you will be asked if you want to turn Live mode off.

LIBRARY: gives access to individual items contained in internal memory, Backing Tracks and Videos. If inserted it gives access to the USB flash drive. When a USB Stick is inserted, we can position on the flash drive and browse its contents. Individual tracks (stereo Mp3 or Wav) can be played at will.

PLAYLIST: gives access to the list of Playlists contained in B.Beat. Playlists can be played or edited.

SHOWS: gives access to the list of Shows and Scenes contained in B.Beat's internal memory.

METRONOME: gives access to metronome management.

POTENTIOMETERS:

BCK-TRACKS: adjusts the level of the Backing Tracks going to the headphones. This data is manageable both with B.Beat manager and by B.Beat.

CLICK: adjusts the headphone level of the Click or Metronome track

LINE IN: adjusts the headphone level of the signal coming in from the Line In inputs.

VOLUME: adjusts the overall output volume.




Left Side

SWITCH ON: pressed once turns on B.Beat. The second time sets B.Beat to the off position, and a confirmation message appears on the display to turn off B.Beat. Long press of this button (>2.5") directly turns off B.Beat.

LOCK: allows B.Beat to be secured to prevent theft or accidents; use a standard Kensington cable.

Let's take a look at

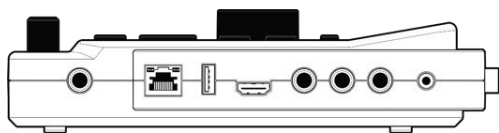

Right Side

PEDAL: a Start Stop pedal can be connected. The first press corresponds to PLAY, the second press corresponds to STOP. Here is a list of features:

- Pressed once: PLAY
- Pressed the second time: STOP (pause)
- Pressed twice quickly: the Next song pointed starts.
- Pressing more than 1 second: in case we have a loaded Playlist enters the playlist [corresponds to ENTER].
- When in playlist: pressed once scrolls down the list, pressed twice quickly scrolls back up the list.
- When in Playlist: held down for more than one second stores the item pointed.

ETHERNET: to connect via network to the PC.

USB: USB flash drives or Wi Fi M-Pen M-Live connection flash drives can be inserted. When you insert a USB flash drive B.Beat displays its contents in the Library window. Connecting the Wi Fi M-Pen flash drive to the USB slot will open the connection for Smartphone and Tablet for the purpose of using the Prompter App and viewing sheet music and Lyrics of backing tracks.


VIDEO HDMI: you connect any video peripheral with an HDMI interface.

PHONES: headphone output, dedicated to the drummer. This channel allows listening to the Click, Backing Tracks and return from the Line In inputs.

L/Mono: Left or mono channel input

In – R: Right channel input

MIDI: Midi output for use with appropriate MIDI cable - MiniJack (3.5mm) Type B.

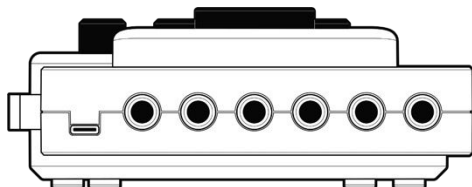

Back

USB Power: power supply input. It can be used with the power supply provided as standard, or with power bank 10000mAh/24A. It is recommended to use a cable of at least 3A and maximum length 1m. It is not possible to determine at first glance whether a device will work from license plate data.

OUTPUT: 6 Mono Audio outputs that can convey separate, click, stereo or mono tracks.


GO,
let's get started!



MAIN FEATURES AND CONNECTIONS

The primary function of B.Beat is to accompany your live performances by playing pre-recorded Audio tracks on DAW. In addition to audio tracks B.Beat can play videos and/or images that can be transmitted on video Walls; it reads and trans-

mits Midi Files that contain messages for your instrument set up on stage. Let's first see a complete connection diagram of B.Beat by imagining a Live Set Up, on a stage.

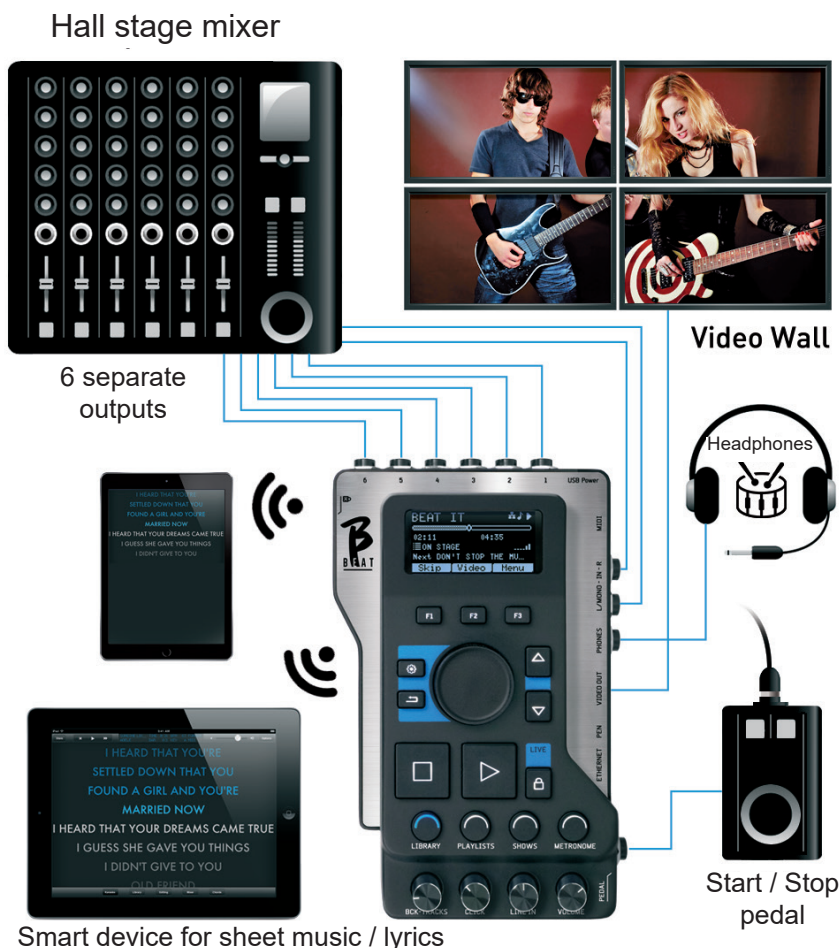



TRANSFERRING DATA TO B.BEAT

All Audio, Video, Images and Midi material must be prepared through a DAW and other Audio Video synchronization programs. Once the sound and video material for your Show is properly assembled and mixed you will be ready to transfer it to B.Beat. For this we use B.Beat Manager, a software made available in both Windows and Mac versions.

If you have Audio Backing Tracks available in Mp3 Stereo or Wav format you can upload them to B.Beat using the USB input, with a flash drive. B.Beat reads the contents of the flash drive and plays it in real time, or it can import the files within its memory.

To transfer the Backing Tracks repertoire, Videos, Images and Midi Files synchronized to audio you can use the B.BEAT Manager software; below are the connection diagrams:

CONNECTING B.BEAT TO COMPUTER

Here are the ways to connect B.Beat and Computer, which can be PC or Mac:

The easiest way to connect B.Beat to the Computer is to use the Ethernet network.


It goes like this:

1.Connect the provided network cable between B.Beat and the Computer


2.Turn on B.Beat

3.Launch the B.Beat Manager App

4. After about 60 seconds the App will detect the B.Beat connected, so you can connect to the B.Beat by pressing the button on B.Beat Manager:



5.The display of B.Beat shows this screen confirming the connection made

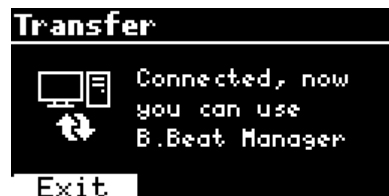

If your PC does not have Ethernet input you have two options:

1.Use a USB - Ethernet interface for PC.

2.Generate a Wi Fi Hotspot with B.Beat to which the PC can connect. To generate the hotspot, the optional Wi Fi Stick is essential. The password to enter B.Beat Hotspot by default is 12345678.

3.Connect the Computer to the hot spot of B.Beat which will be detected automatically. The default password is 12345678.




It can be changed later by the B.Beat Manager software.

To connect B.Beat to the Wi Fi network we suggest this procedure [optional Wi Fi Stick required]:

- 1.Insert Wi Fi Stick on B.Beat
- 2.Connect the B.Beat to the pc via the provided Ethernet cable (or via hotspot as above)
- 3.open B.Beat manager on pc and connect to B.Beat (see above)
- 4.in the Software click on options (gear icon in the upper right corner)
- 5.open the "networks" tab
- 6.select the wi-fi network you want to connect to
- 7.type the password of the Wi Fi network in use
- 8.click on save and connect
- 9.Your B.Beat is connected to the Wi Fi network in use (if you are connected to the PC on Hotspot at this point the connection to B.Beat will be cut off but you can re-enable it as above)
- 10.disconnect the Ethernet cable from B.Beat
- 11.also connect your pc to the wi-fi network (if you have not already done so)
- 12.open the B.Beat manager on the pc and connect to the B.Beat in the new Wi Fi network in use.

The mentioned procedure also applies to Hotspot networks generated by Smart Phone or Tablet.

From now on, the network data (address and password) are stored on B.Beat, which will automatically recognize the network. This solution is perfect when you are using B.Beat at home and want to use Wi Fi.

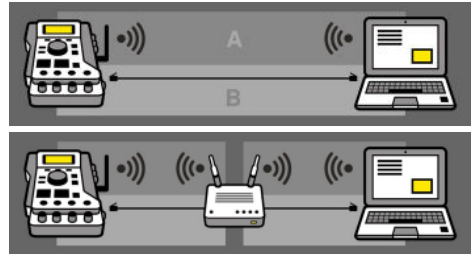

To transfer a large number of Backing Tracks and Videos we recommend using the Network cable connection mode. The network connection ensures maximum speed and reliability when passing data.

INSTALLATION OF B.BEAT MANAGER SOFTWARE

The B.Beat manager software is available in two versions for two operating systems:

Windows 7 and following - macOS 10.15 Catalina and following. Full compatibility is not guaranteed on earlier systems. The software can be downloaded for free from this address

Windows

https://download.m-live.com/download/bbeat/manager/bbeat_manager_win.exe

Mac

https://download.m-live.com/download/bbeat/manager/bbeat_manager_mac.dmg



BACKING TRACKS - FORMATS

Audio Backing Tracks can be of different formats which we summarize here:

- 1.Audio Mp3 or Wav (or other digital formats) into a stereo track (without click)
- 2.Audio Mp3 or Wav (or other digital formats) in two mono tracks (with click in one of the two tracks)*
- 3.Audio multitrack (mp3 or wav or other digital formats) **
- 4.Stems (audio multitrack according to an established protocol)

B.Beat can play the 4 formats we have listed.

*B.Beat automatically recognizes the Click if present in one of the tracks in the Audio project or Stereo file you want to import.

❗ ** B.Beat can read single Backing Tracks with a maximum number of 16 Mono tracks. This means that if Backing Tracks had stereo tracks the maximum number of tracks would be 8. Backing Tracks can also have mono or stereo tracks, the important thing is that the maximum number of "channels" does not exceed 16. For example, 3 stereo and 10 mono. If your Backing Tracks has more tracks you will have to delete some tracks or mix them with other tracks in the project through your DAW.


IMPORTING A PROJECT AUDIO MULTITRACK ON B.BEAT

Once you have created on your DAW the Audio file that constitutes the Backing Tracks you can save the same project to separate tracks, so each track will constitute a single Audio file (Wav or Mp3). Save it to a folder that will contain all the tracks in that single Audio project.

❗ The maximum number of tracks you can read with B.Beat is 16 mono, or 8 stereo.

You are now ready to import the project you just created into B.Beat:

- 1.Connect B.Beat to the PC in a preferred mode
- 2.Launch the B.Beat Manager program
- 3.Press this button in the main screen of the B.Beat Manager program:



From this point you can transfer Audio projects to B.Beat. See B.Beat Manager Software guide.



IMPORTING A VIDEO OR IMAGES TO B.BEAT

B.Beat can play Video files in Mp4 and MOV format.

Video files can be previously synchronized with an Audio project. Synchronization can be done with any Video Editing software for example iMovie, Final CUT and others.

Once you have synchronized the video with the music you can transfer both the audio and video project to B.Beat and create a project that will be handled by B.Beat as if it were a single Audio and Video item. This is especially effective for performances in which you want to combine a Video commentary with music. The video can be associated with Backing Tracks even without being synchronized, but the moment you join it to the music on B.Beat manager the two items will be joined and will be played together by B.Beat.


The video can also be transferred to B.Beat without being joined to Backing Tracks, in which case the file will be independent of the music but can be played at any time, and will accompany your performances.

You are now ready to import the Video/Images to B.Beat:

- 1.Connect B.Beat to the PC in a preferred mode
- 2.Launch the B.Beat Manager program

3.From the Library menu, select Media.

4.Click on the key:




From this point you can transfer video File to B.Beat. See B.Beat Manager Software guide.

IMPORT MIDI FILE TO B.BEAT


Projects imported from the PC to B.Beat can contain Audio, Video and Image tracks and even a MIDI File. With the Midi File you will be able to issue particular controls to the various devices in your set up. These messages, when synchronized with the music, will allow for greater effectiveness of your performance. Through Midi you can throw exclusive program or system change messages to keyboards and expanders or other modules you use in the live part of the show. In addition, the Midi File can contain the lyrics and chords of the backing tracks, in which case they will be imported to B.Beat and read via M-Live's Prompter App available for Smartphones and Tablets of all types. Writing Lyrics and chords can be done on the Daw using meta event Midi. See the "Lyrics and chord writing" chapter. You can create the MIDI File on your DAW, and then you will transfer it to B.Beat within an Audio-Video project that will make up the sound and video part of the show. The



Midi track will be played by B.Beat through the MIDI output. To properly transfer the Midi file associated with the Audio project, it is recommended that the Midi file be saved to the same folder where the Audio and Video tracks of the project are contained. Switching to B.Beat from computer can be done simply by pressing the "+CREATE new AUDIO PROJECT" key from the main screen of B.Beat Manager:



Then you can drag the folder that contains the Backing Tracks and the associated Midi File.

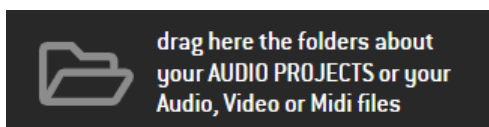

For further procedures for importing files and creating Playlists and Shows, refer to the B.Beat Manager online help.

PLAYLIST AND SHOW

B.Beat can play single Backing Tracks, accompanied by Video - Images and Midi Files, or it can organize the repertoire into

Playlists that are built either on B.Beat but even better on PC with the B.Beat Manager software.

Playlists are setlists that can be changed throughout the evening, either temporarily or permanently. We will then see how you can interact with the Playlist during a live performance. The Playlist provides a lot of flexibility between songs, and you can make changes very easily.

The **Show** is a developed playlist. A Show consists of several scenes. Scenes may contain one or more items called SLOTS. Shows can be built with B.Beat Manager software. Show management allows combining Music with Videos and/or images so that your show is perfectly organized and just press PLAY to start it. The sequences between Audio and Video or images will be automated, including pauses and other connecting details between the various scenes that make up the show. The Show offers the advantage of having automatic sequences that link music tracks to each other, but you can also insert Pause or you can create Slots where the only thing playing is the Click or metronome.

Playlist and Show environments are easily accessible with dedicated keys:






Operating environments

OPERATING ENVIRONMENTS

B.Beat during performance can be operated in 4 different operating environments that can be reached by clicking the relevant key. By default, B.Beat will turn on in the Library environment, but then it will be placed in the last selected environment before turning off.

LIBRARY

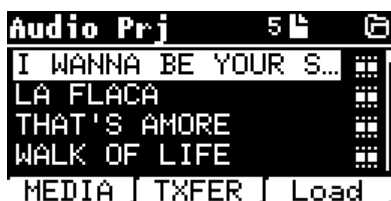

By pressing the Library key we enter the general archive of all Audio or Video projects that have been imported from the various sources (PC/USB FLASH DRIVE) and by means of the Alpha Dial and the UP and DOWN keys we can scroll through the list. By selecting PRJ or MEDIA we choose whether we are interested in the Audio or Video archive. If we have inserted a USB Flash Drive into the dedicated slot of B.Beat the USB function giving access to the flash drive will appear on the F2 key. When you select a File these possibilities open up:

1)PRESS PLAY: sets the selected item into play, if a song is already playing it will


switch to the new one immediately.

2)PRESS ENTER: enters a subpage from which it is possible to:

a)Set as next: places the selected item on the NEXT SONG location, in fact the item will be ready to play at the end of the current execution.

b)Delete: deletes the selected item. Selecting this option will open a new window to confirm or cancel your choice.

3)PRESS F3 LOAD: the chosen song is loaded into memory, ready to be played. If another song that is playing is loaded into memory, a confirmation screen appears because the current performance will be stopped. Press OK to confirm or Cancel to cancel.

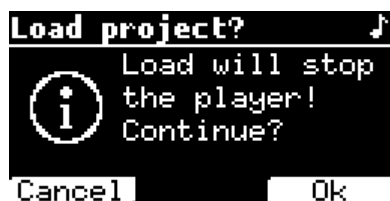


When the USB Flash Drive is not plugged in, the F2 key controls the TXFER function that allows connecting to the B.Beat Manager if connected to the PC.



USING THE USB FLASH DRIVE

B.Beat reads USB flash drives that can contain Backing Tracks in Mp3 or Wav format.

The following screen appears when inserting a USB flash drive into the B.Beat drive:

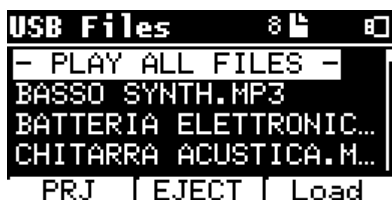

From this screen, which lists the names of the files contained on the flash drive, you can:

- 1) Browse the flash drive archive (through the Alpha Dial, Up Down keys).
- 2) Play the files directly (even in sequence if you select "Play all files"). Point to a file and press Play to play it.
- 3) Import the files into B.Beat's internal archive.
 - a) Point a file with Alpha Dial or up - down
 - b) Press Enter on Alpha Dial
 - c) From the next screen, press "Import"
- 4) Select a project as the Next Song from the flash drive.
 - a) Point a file with Alpha Dial or up - down

- b) Press Enter on Alpha Dial
- c) From the next screen, press Set as next
- d) Since then, the project is placed in the Next Song location.

When a USB flash drive is inserted into B.Beat, the internal memory can be accessed by pressing the LIBRARY key, and the flash drive by pressing the F2 USB key. If you want to eject the flash drive press F2 Eject from the Flash Drive read position.

PLAYING A BACKING TRACKS

To play an Audio project:

- 1) Press [Library]
- 2) Turn [Alpha dial] or press [up and down] to select the file
- 3) Press [Play] to play, the song starts.
- 4) The Player screen appears



At the top is the title of the running File, the icons on the right indicate that B.Beat is connected to a network, the running file has an associated Video, the file is in the paused position.

Under the title is the Song Position Pointer. We can move along the Song by turning



the Alpha Dial. SPP will move to the desired point, and pressing Enter will move to that point.

Below the SPP are the time indicators: time elapsed from the beginning, time to the end of the song.

The running Playlist, if any, is described under the indicators. Otherwise this line is blank.

On the right are the Vu Meters that report the levels of the Output outputs: be careful if the volume potentiometer is at zero these vu meters are not active.

NEXT: indicates the Song that will follow the current one. The Next song can be freely selected, or it can be the Song in the playlist if we are using a Playlist or Show. To the right of NEXT the word MAN indicates that Play next will have to be done manually, either by pressing PLAY or by pressing the Start/Stop Pedal if present.

This screen allows you to check the Player's status and perform some actions:

STOP: if pressed once the running project will be set to Pause. If pressed a second time the project will go to TOP. If pressing Stop the third time, the memory will be emptied and it will go to the Playlist screen.

PLAY: activates playback of the current project. If the key flashes Blue means the project is paused, press Play to continue. When the Play key flashes quickly, it means a Song is loaded into memory, ready for Play.

ALPHA DIAL: by turning the alpha dial the song position moves along the Time line of the project loaded in memory, the display shows the target song position (GO TO) in minutes and seconds. By pressing enter the performance starts from the chosen Song Position. This can happen even while the project is running.

If a PLAYLIST is loaded, this icon appears on the Player screen: 

The playlist is playing, and when you press the ENTER key, you will go directly to the list of projects contained in the Playlist. From here you will be able to perform some Playlist selection and editing actions. See PLAYLIST chapter.

Function keys on the PLAYER screen:

1.SKIP (F1) allows you to "skip" or in technical terms skipping the Backing Tracks that appear in the "Next" field. The "Next" field indicates which is the title that will be played after the Backing Tracks being played; if the Next field is blank (---), it means that there will be no Projects to be played at the end of the current run.

2.VIDEO (F2) if Backing Tracks and a video are running we can access the management of the video without affecting the Play of the musical Backing Tracks. Pressing F2 VIDEO opens a screen that allows controlling Stop and Play of the running video.




3.MENU (F3) offers two options:

- a.Edit tracks
- b.Level Meters

EDIT TRACKS

❗ Editing of tracks and mixes on the DAW is recommended to be completed. In any case B.Beat and especially the B.Beat manager software allow some interventions for the purpose of improving performance. These interventions can be done from the Edit Tracks page:

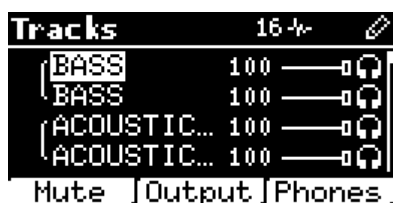

From this screen you can select a track (press Up or Down keys to move along tracks) and make changes as follows:

- **Mute a track:**

select the track with Up and Down
-> press [F1] Mute.

Press F1 again if you want to Unmute.

The Mute icon appears on the left:

The Family Mute: on B.Beat it is possible to set Instrument Families. This option is managed from B.Beat Manager - see specific guide. For example, we can set various instrument families (keyboards, bass, percussion etc.) and assign them

to the specific family. In this way we can define a Mute relative to the specific family, from B.Beat manager. By activating the Mute mode of a family all tracks belonging to the specific family will always be muted, for all Audio projects uploaded to B.Beat. If we want to exclude the Family Mute from a specific project, we can always do so from the Mute function on Edit Tracks. This icon appears next to the track name when an instrument family is in Mute mode:



Family Mute can only be used on Backing Tracks that have separate tracks. For example, on the MTA files that can be downloaded from the website www.songservice.it

- **Send the track to the Headphone output:**

select the track with Up and Down
-> press [F3] Phone.

The icon appears on the right

Press F3 again if you want to exclude the track from the Headphone output.

❗ The headphone output will be adjusted via the BCK-TRACKS potentiometer.


- **Adjust the volume of a track:**

select the track with Up and Down
-> turn the Alpha Dial to turn down/up the volume. The value is indicated in graphics and by a number from 0 to 100.



- **F2 Output key:**

Pressing F2 accesses the Audio output setting:

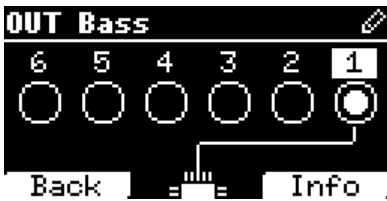

Each track can go out on one or more of the 6 available outputs. To select one or more outputs:

Turn the Alpha Dial and select an output, press ENTER to enable the output, press again to disable the same output.

By pressing F3 INFO you can check which track comes out on the selected output.

- **Playing a Video (Media)**

Press [Library]

Press the function key [F1 - MEDIA]

Turn [Alpha dial] or press [up and down] to select the file

Press [play] to launch playing

The Main screen appears

PLAYLIST

The Playlist is a set of Audio Projects (or audio + video) that is selected from the B.Beat Library and can be played in sequence according to a preset order. Between songs the Playlist can stop or it can continue automatically via Autoplay (see System menu -> Autoplay).

The Playlist can also be used as a simple binder of Projects that are used at particular events. Projects can be recalled at will.

When the Playlist is loaded into memory the complete list of songs contained can be viewed by pressing ENTER, on the Alpha Dial from the main page of the Player.

The Playlist environment contains the list of Playlists that have been transferred from B.Beat Manager or have been created on B.Beat. The following functions are possible from this operation section:

1.PLAY key: Immediately play the selected playlist through Up and Down

2.ENTER key: to access the contents of the Playlist and edit it at will.

3.F1 Delete key: delete the selected playlist through Up and Down

4.F2 New key: create a new Playlist

5.F3 LOAD key: load the selected Playlist into memory through Up and Down



SELECT A PLAYLIST

Press [PLAYLISTS] the list of Playlists stored in memory appears.

Turn [ALPHA DIAL] or [up and down] to select

Press F3 [LOAD] to load the Playlist into memory. Now it is ready to play. Alternatively, you can press PLAY and the Playlist will start immediately.

❗ If the Player is playing an audio or video a confirmation screen will appear before loading the memory and stopping the current playback.

NEXT SONG

The title of the Song next to the one in Play appears when a Playlist is playing in the "NEXT" field. Pressing the F1 "Skip" key allows you to skip the next Song and move on to the next one. When you press skip, a window appears asking you to confirm your choice. Basically, when a Playlist is played, you can decide, even while the Playlist is playing, to change the Song lineup.

AUTO PLAY

System menu > Options > Auto Play: If you select the Auto Play "ON" function at the end of one Song the next one will start immediately. Conversely, the next song starts only by pressing the Play button or the Start Stop pedal if connected.

PLAYLIST > [ENTER] EDIT

B.Beat allows editing a Playlist. To edit:

Press [PLAYLISTS] Turn [Alpha Dial] or [Up Down] to select the Playlist you want to edit.

Press ENTER on alpha dial to enter the following screen:



Three options appear: More, Remove, Add.

To move a Song from its position:

Press F1 [MOVE] turn [ALPHA] or [Up Down] to move

Press F1 [CANCEL] to exit or F3 [OK] to confirm.

To delete a Song from the Playlist:

Turn [ALPHA] or [Up Down] to select the Song to be deleted

Press F2 [Remove]



Confirm with F3 [Remove] in the next confirmation screen, or F1 [Cancel] to cancel the choice.

To add a Song to the Playlist:

Press F3 [ADD] the page will move inside the LIBRARY and you can select the Song to be added to the Playlist by scrolling through the list via [Alpha Dial] or [Up Down].

Once you have found the Song to add press F3 [ADD] to add the song or F1 [CANCEL] to cancel the operation.

The Song will automatically be added to the bottom of the Playlist. Then it can be moved with the MOVE function.

PLAYLIST > F2 DELETE

To delete a Playlist.

Select the Playlist you want to delete via [ALPHA] or [Up down]. Press F2 [Delete] and a screen will appear asking for confirmation: Press F3 [Delete] to delete the Playlist, press F1 [Cancel] to cancel the operation.

PLAYLIST > F3 NEW

Press F3 [NEW] to create a new Playlist. The new playlist will automatically be named LIST # since on B.BEAT there is no way to name items. At a later time we can change its name from the B.BEAT Manager software.

PLAY A PLAYLIST

We have seen how to create, edit, search and select a Playlist. Now let's see what we can do while a Playlist is running.

Let's select a Playlist and load it into memory using the F3 [LOAD] key. At that point we can start the Playlist at will. The Player screen appears as shown below:

```
List 1          4 6  [Menu]
01 I WANNA BE YOUR ...
02 WILD WORLD
03 WILD WORLD
04 LA FLACA
Move [Remove] Add .
```

Pressing ENTER takes you to the display of the Playlist, and the songs in the playlist.

```
List 1          [Menu]
01 ▶ I WANNA BE YOUR...
02 WILD WORLD
03 WILD WORLD
04 LA FLACA
Skip [Next] [Load] .
```

From this screen there are three possible functions:



F1 [SKIP] Excludes the selected song from playing the playlist. Select the Song by turning [ALPHA DIAL] or [Up down] press F1 [SKIP]. An icon will appear indicating that the Song will not be played in the current Playlist.

F2 [NEXT] Inserts the selected song into the Next location. So the song will be played after the one playing. Select the Song by turning [ALPHA DIAL] or [Up down] press F2 [NEXT]. The letter "N" appears next to it, and the song is placed in Next location.

F3 [LOAD] Loads the selected song into memory, ready to be played. Select the Song by turning [ALPHA DIAL] or [Up down] press F3 [LOAD]. The song will be loaded into the Player and ready to be played.

❗ If the Player is playing an audio or video a confirmation screen will appear before loading the memory and stopping the current playback.

PLAY: to play any of the Songs in a playlist. Select the Song by turning [ALPHA DIAL] or [Up down] press PLAY. The song will start immediately, interrupting the Song that is playing.

SHOWS

The Show is a tool for organizing a show from its preamble until the moment the

lights go out on the stage. The Show tool allows organizing all the moments of our evening, both when we are active on stage playing and singing but also in the breaks, for example with videos and background images. To create and edit the Show refer to the B.Beat Manager Software guide. Structurally, the B.Beat Show is divided into Scenes, which in turn contain Slots.

The Slot is an event that can contain:

1. Backing Tracks with or without background images
2. Images
3. Video
4. Audio tracks (uploaded to B.Beat as projects)
5. Metronome [without Backing Tracks] with or without background images
6. Breaks (moments when the show goes on but, for example, there is a musical break)

The Scene can contain a video/background image that can be alternative to the video/image contained in the Slot. The video contained in the Slot takes precedence over the Scene Video. The scene can be placed in LOOP so at the end it starts again from the beginning. This can be useful in Pauses if we have a playlist of recorded audio tracks: the Playlist will be repeated from the beginning until we stop the Scene to move on to the next one. The video part accompanying the music, if present as images or video sequence, will



also be repeated.

The show and scenes can be built easily on B.Beat Manager, refer to the guide on B.Beat manager to explore this topic further. Once the programming of the Show is completed, the Show must be transferred to B.Beat for Live performance.

By pressing the **"SHOWS" Key** we access the list that collects them within B.Beat.

The screen has the usual three assigned Function keys: F1 [SHOWS] shows the list of archived Shows. F2 [SCENES] Shows the list of archived Scenes. F3 [LOAD] pressing this key will load the show or a selected scene into memory, at which point it will be ready to be played with the PLAY key.

To select a Show we can scroll through the list with Alpha Dial or the Up and Down keys. Pressing PLAY runs the selected Show or Scene.

Here is the screenshot of the Player when we load a Show:



The icon  represents the Show, to the right is the title of the loaded Show (or scene).

When we load a SHOW the B.Beat is ready to play the list of all the events contained in the SHOW, which, we remind you, is a highly developed Playlist. Here are the differences that characterize a SHOW:

1. The SHOW contains a series of SCENES, SCENES consist of one or more Audio and/or Video contents (called SLOTS).
2. Within a Show you can put Scenes in the lineup. A Scene can consist of several SLOTS.
3. Each event (Slot or Scene) is connected by a transition that can be automatic (the next slot starts automatically after a delay of "n" seconds) or manually (pending consent from the Play button).

When running a Show the options we have are similar to those in the Playlist, in fact by pressing the ENTER key we access the list of SCENES and the events contained in the scenes.

ENTER (IN SHOW ENVIRONMENT)

When loading a Show into memory, the Enter key allows you to enter the SHOW and view the Scenes and Slots. From this



screen you will have some operational possibilities:

F1 [SKIP] Excludes the selected SLOT from the execution of the Scene. Select the SLOT by turning [ALPHA DIAL] or [Up down] press F1 [SKIP]. An icon will appear indicating that the SLOT will not be played in the current Scene.

F2 [NEXT] Inserts the selected SLOT into the Next location. So the SLOT will be executed after the one running. Select the SLOT by turning [ALPHA DIAL] or [Up down] press F2 [NEXT]. The letter "N" appears next to it, and the SLOT is placed on Next location.

F3 [LOAD] Loads the selected SLOT into memory, ready to be executed. Select the SLOT by turning [ALPHA DIAL] or [Up down] press

F3 [LOAD]. The SLOT will be loaded into the Player and ready to be executed.

❗ If the Player is running another Slot (audio or video) a confirmation screen will appear before loading the memory and stopping the current run.

PLAY: to play any of the SLOTS in a SHOW. Select the SLOT by turning [ALPHA DIAL] or [Up down] press PLAY. The song will start immediately, interrupting the SLOT that is running.

❗ The PLAY button features immediate action, so if the Player is playing music or video these will be stopped permanently.

METRONOME

B.Beat includes a metronome. It can be used as guide during a Live performance. It can be placed within a scene that will make up a show.

Pressing the Metronome key takes you to the dedicated page.



BPM: indicates the chosen speed. It can be changed with Alpha Dial (rotate left or right) or with the TAP function.

TAP: press F2 [TAP] -> tap the stop button to give the metronome time -> press F3 [DONE] when you have completed.

METER: choose the metric subdivision. You can change the value with Alpha Dial.

2nd BEAT: choose a second beat within the measure, you can select the fourth or eighth of the measure on which you want the second beat.



VOLUME: choose the output volume of the metronome. Change the value with Alpha Dial.

SOUND: choose the sound to be used for the metronome. Turn Alpha Dial to select.


OUTPUT: choose the output. Change the value with Alpha Dial.

LIGHT: allows the CLICK sound to be associated with a timed light, in the METRONOME key.

Once the settings are made, the metronome is ready to go: press F3 [START] or Play to begin. THE metronome can be programmed within a SHOW as a Slot. We can program it if we need to send the Metronome to the musicians on stage during a performance, even without a musical base playing. From the Main screen we can change the BPM by pressing the two arrows Up and Down.

SYSTEM

The System key gives access to a number of B.Beat settings, as well as managing the Wi Fi connection and System information.

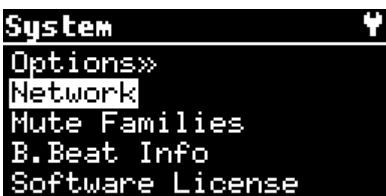

OPTION>>

The option menu contains the following submenus, which can be accessed by pressing ENTER:

AutoPlay: enables or disables the Auto Play function. Press Enter on Autoplay and then select Off or On. Auto Play ON enables automatic play while running the Playlist. When Autoplay is OFF at the end of each song in a playlist B.Beat stops until the Play button is pressed to continue the playlist. The function of Autoplay, Stop is specifically defined for Shows and scenes.

AutoHotSpot: if in the ON position, the Hot Spot function for connecting with Device or Mobile is always active when B.Beat is turned on, as long as you do not want to activate a Wi Fi connection to a public network. The Hot Spot allows Smart Devices to connect to B.Beat and use the Prompter App to display lyrics and Sheet Music.

Display Brightness: adjusts the brightness level of the Display. Press Enter and change the level via Alpha Dial.


Key Brightness: adjusts the brightness level of the keyboard. Press Enter and change the level via Alpha Dial.

Time Format: to define whether the execution timeline should show a countdown or the actual duration of the song. Se-



lect with Enter and turn the Alpha Dial to choose the option.

Default L Output: B.Beat has 6 audio outputs. You can select which of these is assigned to the LEFT channel of a stereo Audio track. Press Enter to enter the configuration screen and turn the Alpha Dial to choose the desired output. Press Enter or F3 [SAVE] to set. Output 1 is selected at purchase.

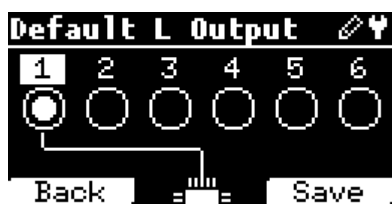

Default R Output: B.Beat has 6 audio outputs. You can select which of these is assigned to the RIGHT channel of a stereo Audio track. Press Enter to enter the configuration screen and turn the Alpha Dial to choose the desired output. Press Enter or F3 [SAVE] to set. Output 2 is selected at purchase.

Default Click Output: B.Beat has 6 audio outputs. You can select which of these is assigned to the CLICK track of a multitrack backing track. Press Enter to enter the configuration screen and turn the Alpha Dial to choose the desired output. Press Enter or F3 [SAVE] to set. Output 3 is selected at purchase.

Default Guide Output: B.Beat has 6 audio outputs. You can select which of these is assigned to the GUIDE track (voice suggestions) of a multitrack backing track.

Press Enter to enter the configuration screen and turn the Alpha Dial to choose the desired output. Press Enter or F3 [SAVE] to set. Output 6 is selected at purchase.

NETWORK

B.Beat connects to different entities in different manners.

B.Beat can connect to a computer via Ethernet cable, or via Wi Fi (optional M-Pen required) also can generate a Wi Fi Hot Spot to connect to Smart Devices (Tablet or Smartphone) for using the Prompter App and reading lyrics and sheet music.

Wi Fi or Hot Spot connection are alternatives, if you use B.Beat as a Hotspot it cannot connect to a Wi Fi network, and vice versa. Wi Fi connection and Hot Spot generation are possible only with the optional M-Pen.

From the Network page we can check how B.Beat is connected and change its settings. In addition, we can obtain the data to enter its Hot Spot.

Ethernet: this item signals connection via network cable to a PC or network. By pressing F2 [INFO] we can see the IP address of the current connection.

Hotspot: this item reports whether or not



the private Wi Fi network is activated (with optional M-Pen). You can change the settings with the function keys:

1.F1 [BACK] to exit this page.

2.F2 [INFO] displays the IP and password to enter the network "12345678" by default; from the B.Beat manager Software you can change this Password in the options area. To connect to the B.Beat Hot Spot, the QR code can be used by pressing F3 [QR-code] on the Info page. It is necessary to connect to the B.Beat hot spot in order to use the Prompter App for the purpose of viewing lyrics and sheet music present in the Backing tracks.

3.F3 [ENABLE – DISABLE] to turn the hot spot on or off. NOTE: When the hot spot is active, it is not possible to use Wi Fi connection to a public network.

Wi Fi: you can enable Wi Fi connection to active networks to connect even without the Ethernet Cable. Entering the Wi Fi page activates three functions (with the optional M-Pen):

1.F1 [BACK] to exit this screen.

2.F2 [INFO] to check the network to which B.Beat is connected

3.F3 [CONN - DISABLE] to search for an available network and connect. To instruct B.Beat on Wi Fi networks, it is necessary to use B.Beat Manager. In fact, the App

allows detecting the active and available network and setting B.Beat to recognize it, also you can enter the Network password. Once we have set B.Beat to recognize a particular Wi Fi network all we have to do is press CONN and it will recognize it to enter it. This message appears if no Wi Fi network is included among those that B.Beat is set to recognize: "USE B.BEAT MANAGER to connect". When B.Beat connects to a public network, the F3 fast becomes [DISABLE], and pressing it will disconnect B.Beat from the public network.

MUTE FAMILIES

are groups of tools that are established to simplify Mute operations in special cases. Families are created with the B.Beat Manager software, and audio project tracks can be assigned to specific families. For example: the violin can be assigned to the Family Orchestra, as can the viola and cello. If on B.Beat you MUTE the Orchestra family no tracks (including Violin, Viola and Cello tracks) assigned to that family will be played. This will allow you to quickly mute groups of instruments without going into editing projects one by one.



B.BEAT INFO

contains this information: Firmware version / Serial Number / Memory space available and used / Time elapsed since last power on.

SOFTWARE LICENSES

shows Firmware licenses.

LYRICS AND CHORD WRITING

Our Backing Tracks can contain Lyrics and Chords that will be displayed by the Prompter App. The App runs on smartphones and tablets of all types, and is available for free in the Apple Store and Google Play. Backing Tracks in M-Live MTA8 format available at www.songservice.it – www.song-service.com may contain the information of Lyrics and Chords. If you have Personal Backing Tracks and want to write lyrics and chords you can follow this procedure.

How to write a text for B.Beat - Prompter:

Text writing on a Daw capable of editing Meta Midi Events. Meta Events type 05 Lyrics are created, and each meta event contains one line of text that cannot exceed 40 characters (including spaces). Some DAWs will need for each end of line a symbol to determine that it is necessary to start a new line, so write this symbol "|" (pipe) at the end of the line.

Special characters, accented characters or international characters are not allowed. The maximum number of Meta Events (lines) allowed is 500 per song. To facilitate the writing of text, a specific program that can write text in Standard midi Lyric format can be used.

The midi file containing the lyrics can be uploaded to B.Beat along with the related audio project, obviously the lyrics must be written so that the text strings are synchronized to the music. To load the Midi File use the usual procedures via B.Beat Manager. You can load the Midi File along with the Audio project or you can add the Midi track as Extra content. The same Midi File can also contain the chords of the song.

How to write a text for B.Beat - Prompter

Chords are written to a Daw capable of editing Meta Midi Events. Meta Events type 01 Lyrics are created, and each meta event contains a chord. Chords should be written in international notation following the table below. In this way the chords can also be displayed by Tabs for Guitars and Keyboard. The maximum number of Meta Events (chords) allowed is 1.000 per song.

Chords must have the following formula:

[Root note] [variation]/[bass] if any.

For example if the chord is C M7 the [root note] is C and the [Variation] is M7. So our C chord M7 will be written CM7



[Low, when necessary] If we want to write an inversion, e.g. low E we use the symbol "/" followed by the low note in English always between square brackets in our case E

Therefore: C M7 low E It will be written: CM7/E

The midi file containing the chords (and lyrics) can be uploaded to B.Beat along with the related audio project, obviously the lyrics and chords must be written so that the text and chord strings are synchronized to the music. To load the Midi

File use the usual procedures via B.Beat Manager. You can load the Midi File along with the Audio project or you can add the Midi track as Extra content.

List of chords

C	C#	D	D#	E	F	F#	G	G#	A	A#	B
	Db		Eb			Gb		Ab		Bb	

List of variations

m	5	(b5)	aug	dim
7	M7	m7	mM7	7(b5)
m7(b5)	M7(b5)	mM7(b5)	7aug	m7aug
M7aug	dim7	7sus4	2	sus2
sus4	6	6/9	m6	m6/9
9	7(b9)	7(#9)	m9	m7(b9)
m7(#9)	M9	M7(b9)	M7(#9)	add9
madd9	9sus4	11	m11	M11
add11	madd11	13	m13	M13
add13	madd13			



Display Icons

Icon	Meaning
	Hotspot active (optional M-Pen required to generate Wi Fi)
	Active connection via Ethernet cable
	Active connection via Wi-Fi
	Play Status
	Pause Status
	Stop Status
	Live mode active
	Edit mode. You can change the data of: •Playlist •Project (Track)
	The adjacent number is the number of items in the selected environment
	The adjacent number is the number of tracks in the project
	Work environment: Library – internal memory
	Work environment: Library – external USB memory
	Work environment: Playlists
	Work environment: Shows
	Mute track (configured as mute)
	Muted track due to the configuration of the belonging family
	Headphone enabled output
	The item is a Project
	The item is a Project with a media (video or Jpg)
	The item is a metronome
	The item is a break
	The media is an image
	The media is a video, such as the slots of a scene.



Display Icons

	Options menu
	Autoplay of Next (applies to single projects, playlists)
	Starting Next is manual (press play or foot pedal)
	Starting Next is automatic after a certain time (Show)
	The scene is in Loop mode (repeats).
	Information notification
	Request for action or confirmation
	Warning
	Request for shutdown
	Hotspot information
	Wi-Fi information
	Ethernet Information - Cable connected
	Ethernet Information - Cable not connected
	Delete item
	Live mode confirmation
	Metronome configuration
	Metronome Configuration - Tap
	Import audio files from USB
	File Transfer (B.Beat Manager) enabled
	System update or DSP
	Load item into memory
	Load item as NEXT
	Edit Tracks of a Project
	View Vu meters







Ver. 1 - July 8, 2022



M-Live Srl

Via Luciona 1872/B, 47842 San Giovanni in Marignano (RN)

Tel: (+39) 0541 827066 Fax: (+39) 0541 827067

m-live.com - songservice.it